

FREDRICK RAMOND

FR32903 /FR32904BKS

ASSEMBLY INSTRUCTIONS

*** The construction of this fixture will be accomplished by first making all necessary electrical connections, hanging the fixture from the ceiling, and then installing the glass.

SAFETY WARNING: Read wiring and grounding instructions [FRIS 18] and any additional directions. Turn power supply off during installation. If new wiring is required, consult a qualified electrician or local authorities for code requirements.

STEP 1

1. Please refer to the hanging instruction sheet (I.S. 19-35) provided to continue installation of this fixture. Then refer back to this sheet to install glass.


STEP 2

Make electrical connections from supply wire to fixture lead wires. Refer to instruction sheet (I.S. 18) and follow all instructions to make all necessary wiring connections. Then refer back to this sheet to continue installation of this fixture.

STEP 3

1. To install glass, remove socket ring (1) and spacer (2) from socket (A).
2. Slip glass (3) into cage assembly and over socket (A) and hold in place.
3. Slip spacer (2) over socket (A) and hold in place.
4. Thread socket ring (1) onto socket (A) and tighten.
5. Fixture can now be lamped accordingly.

[DRAWING 1]

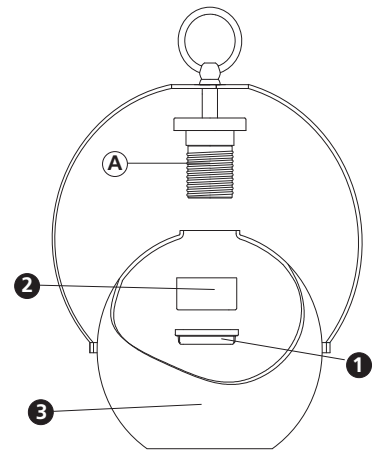

FREDRICK RAMOND
ESTABLISHED 1965

A Division of Hinkley Lighting, Inc.
33000 PIN OAK PARKWAY | AVON LAKE, OHIO 44012
toll free 800.446.5539 | phone 440.653.5500